

LDPI

LIGHTING

4404 Anderson Drive
EAU CLAIRE, WI 5470
1-800-854-0021

Read Thoroughly Before Installing


WARNING: TO PREVENT IGNITION OF HAZARDOUS ATMOSPHERES, THE SUPPLY CIRCUIT MUST BE DISCONNECTED WHEN INSTALLING, RELAMPING OR PERFORMING ANY MAINTENANCE ON THE FIXTURE TO PREVENT EXPLOSION.

CAUTION: WHEN INSTALLING FIXTURE IN HAZARDOUS LOCATIONS, CHECK THE OPERATING TEMPERATURE LIMITS BEFORE INSTALLING TO BE SURE IT CONFORMS TO THE TEMPERATURE RESTRICTIONS AND NEC CLASSIFICATIONS. CHECK THE FIXTURE'S METAL LABEL FOR TEMPERATURE (T) RATINGS.

MOUNTING


PENDANT

Thread the fixture onto the conduit.
Remove the wiring box from the arm using approved NEC procedures. Flats are provided at the top of the fixture to tighten with a wrench. After securing to the conduit, tighten the set screw.

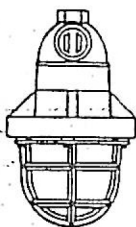


WALL

Remove the wiring box from the arm and attach box to the mounting surface. Pull leads to the box and through the arm to the wiring chamber. Attach the arm to the wall box. The mounting screws should be tightened in alternate sequence.

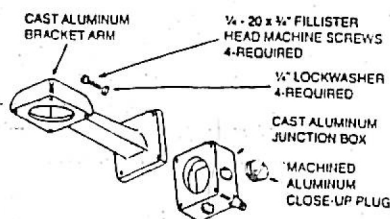

CEILING

 
Attach fixture to mounting surface using the two mounting tabs provided.



These instructions do not cover all details or variations in equipment nor do they provide for every possible contingency to be met in connection with installation, operation or maintenance.


WIRING THE FIXTURE

REMOVE THE LEAD ACCESS PLUG. CONNECT NEUTRAL TO WHITE FIXTURE LEAD AND LINE TO BLACK FIXTURE LEAD. MAKE ALL WIRING CONNECTIONS IN ACCORDANCE WITH ACCEPTED NEC WIRING PROCEDURES. BE SURE ANY UNUSED WIRING ENTRANCES ARE CLOSED WITH CLOSURE PLUGS PROVIDED.

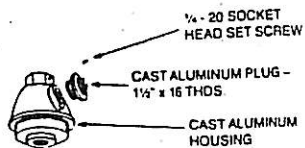

LAMP INSTALLATION

FIRST LOOSEN THE THUMB SCREW AND THEN UNTHREAD LOWER HALF OF THE FIXTURE. INSTALL INCANDESCENT LAMP UP TO 300 WATT PS-25. REINSTALL LOWER HALF SECURELY AND TIGHTEN THE THUMBSCREW. BE SURE NOT TO DAMAGE THE THREADS.

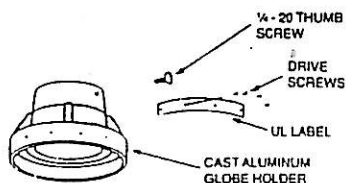

EXTERNAL REFLECTORS

REMOVE THE GUARD AND LOCATE THE REFLECTOR IN DESIRED POSITION OVER THE FOUR MOUNTING HOLES. REINSTALL GUARD WITH THE FOUR MOUNTING SCREWS.

WARNING: THE GLOBE IS TEMPERED GLASS, DO NOT SCRATCH OR CHIP. TURN POWER OFF BEFORE STARTING INSTALLATION, REPAIR OR RELAMPING.

