




# SLIMLIGHT

## HAZARDOUS - BOOTH - CORNER/HIP MOUNT


Industrial • Paint and Powder Booths • Blast Booths • Prep, Inspection, Sanding Areas

**Horizontal or Vertical Mounting Corner/Hip Light Kit**  
**Corner or Hip Mount Kit (PN 4714)**  
For use with 390440J-3546 Slim Light fixture ONLY.  
FIXTURE SOLD SEPARATELY

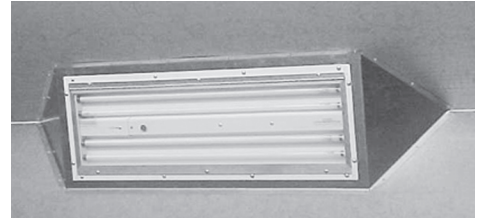

### Corner Light Mounting Option

The following is an acceptable method of installing panel mounted fixtures into the corner of a paint spray booth. Can be installed vertically in a corner, or horizontally in the hip of the booth. Includes all components required to install kit and route wiring conductors out of booth.

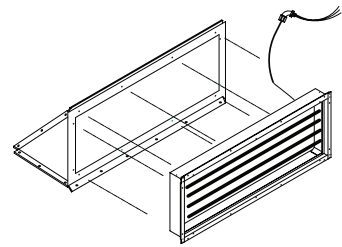

### FEATURES

Part Number: 4714  
To reduce shadowing, corner or hip lighting is ideal.  
Shipping weight: 14#

### KIT

- 18 gauge galvanized panel  
Kit (delivered unassembled) Includes:
- Self tapping screws to mount panel to booth
  - Bolts/Nuts to mount fixture to panel.
  - Wire whip pre-wired to fixture.
  - (4) feet of 1/2" Liquid-Tite Flexible conduit
  - 90° Flex connector to exit booth
  - Straight flex connector to secure flex to fixture
  - (1) Tube of caulk to seal around panel and fixture perimeter

### REQUIREMENTS

For use with the 390440J-3546 Fixture only. (Fixture Sold Separately)

Panel construction must meet the requirements of NFPA 33 Chapter 3, "Construction and Design of Spray Areas, Spray Rooms, and Spray Booths."

Fixture installation wiring to meet the requirements of NFPA 33 Chapter 4, "Electrical and Other Sources of Ignition."

### OPTIONS

Powder Coat Finish

### NOTES

Mounting requires drilling 7/8" hole in booth wall or ceiling to route flex conduit out of booth.  
All wiring must be performed by a certified electrician and in accordance with all national and local electrical codes and regulations.

